

MAINTENANCE MANUAL


INSTANDHALTUNGSANLEITUNG

MANUEL D'ENTRETIEN

ISTRUZIONI PER LA MANUTENZIONE




970.323.00.0(03)

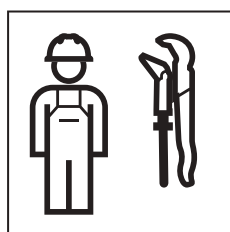





1

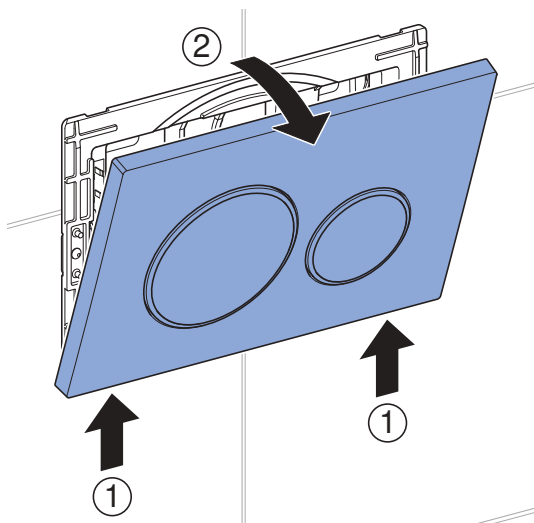


2

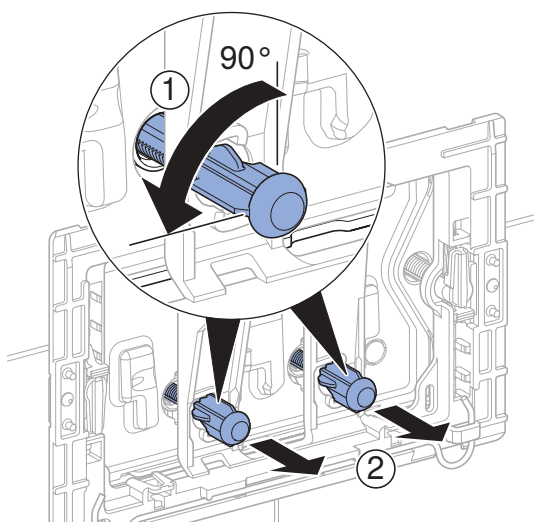


3

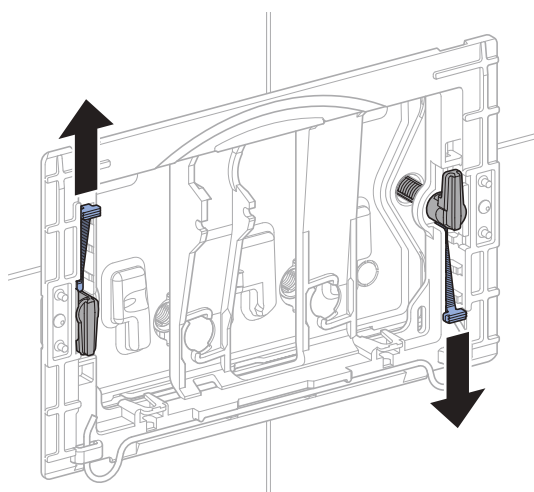


4

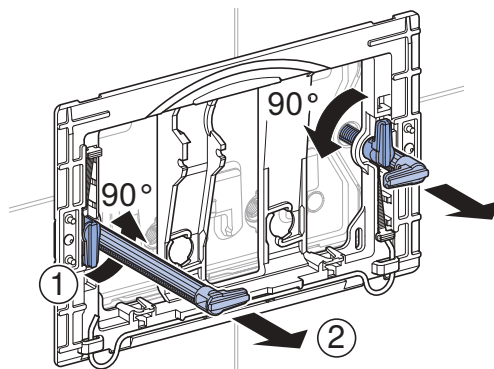


5

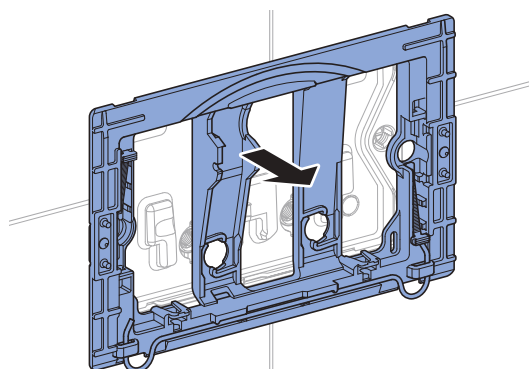

6

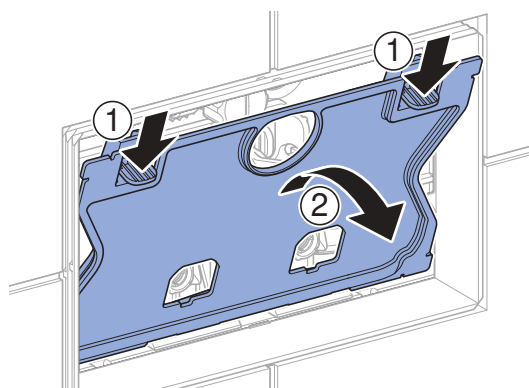


7

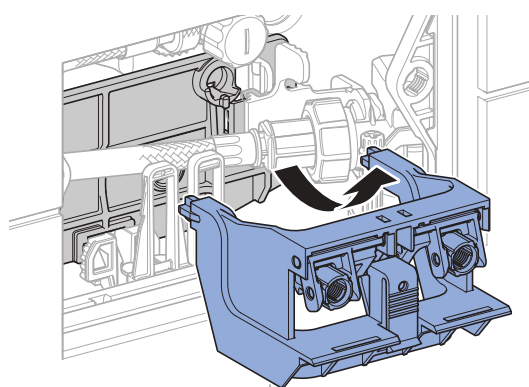


2


1

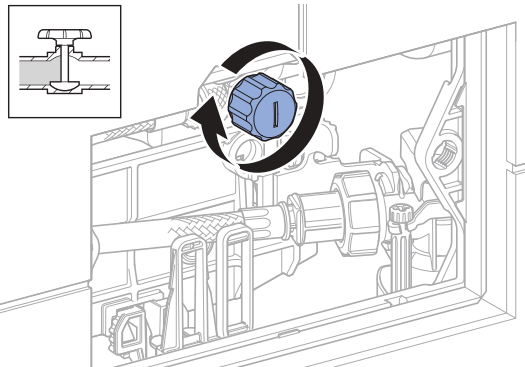


2

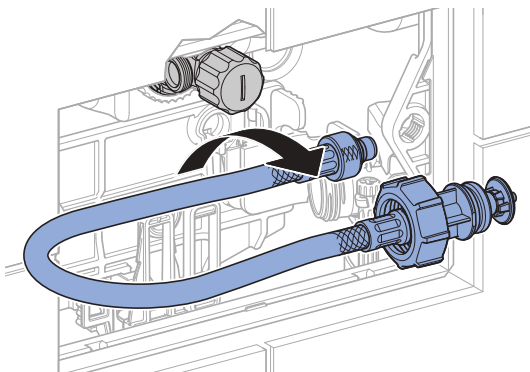


3

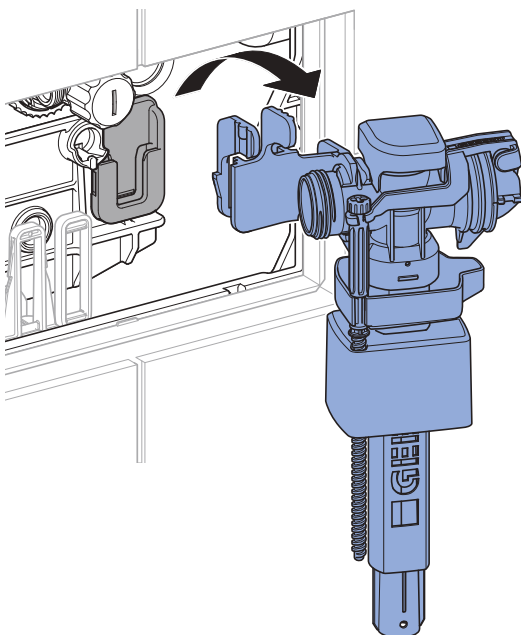


4

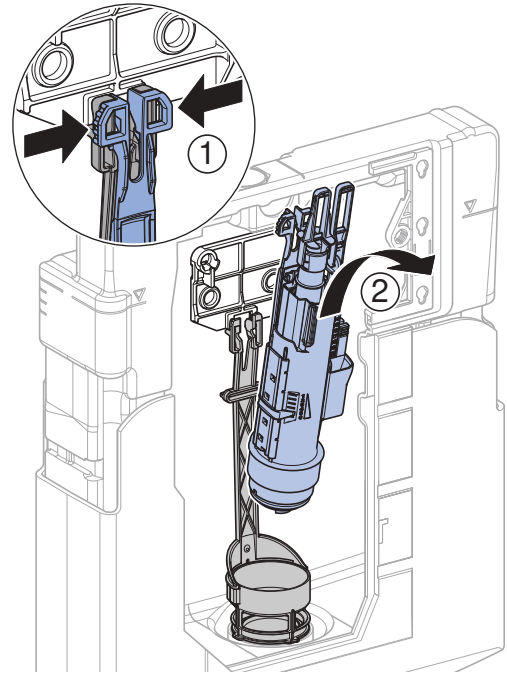

i

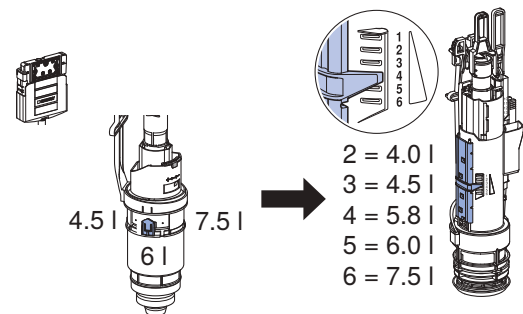

5

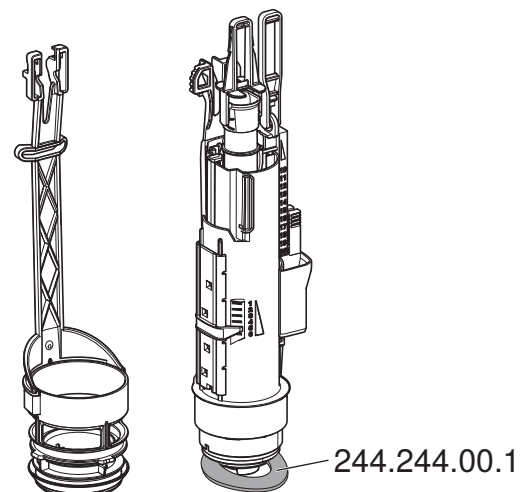

3



Typ 380

 


3

A



4



Typ 383



3

B




5


3

A


1

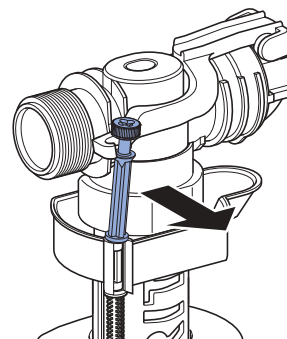




2

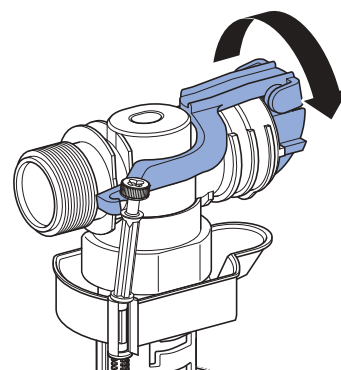

3

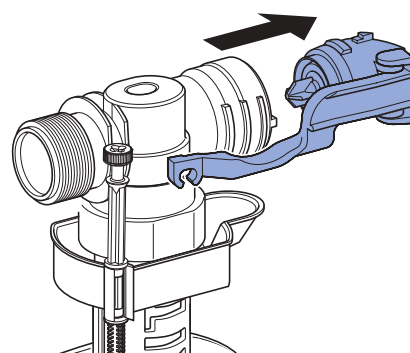


4

  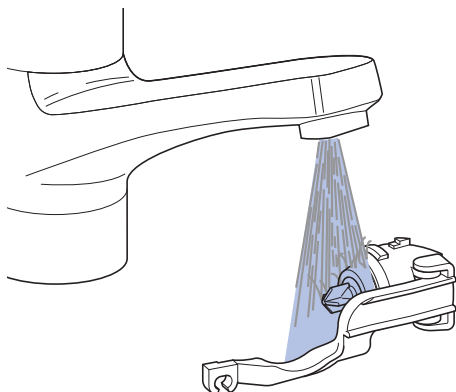


3

B


1

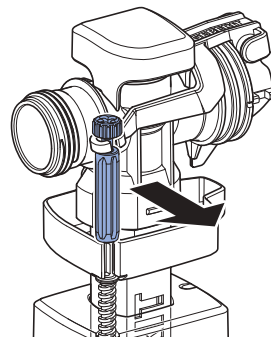




2

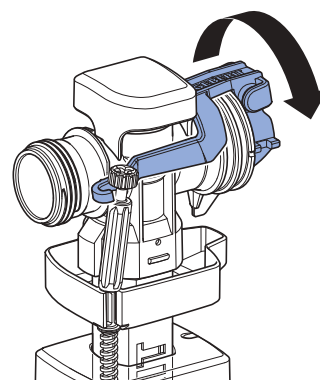


3

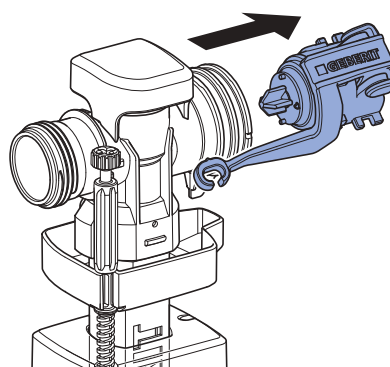

4

 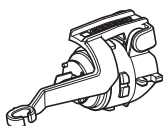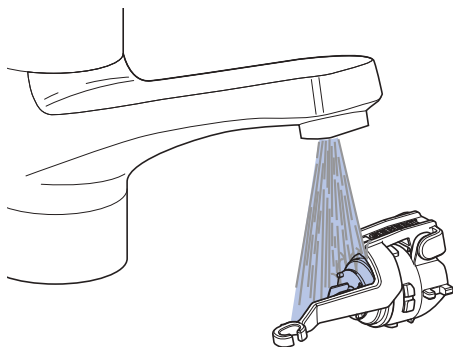


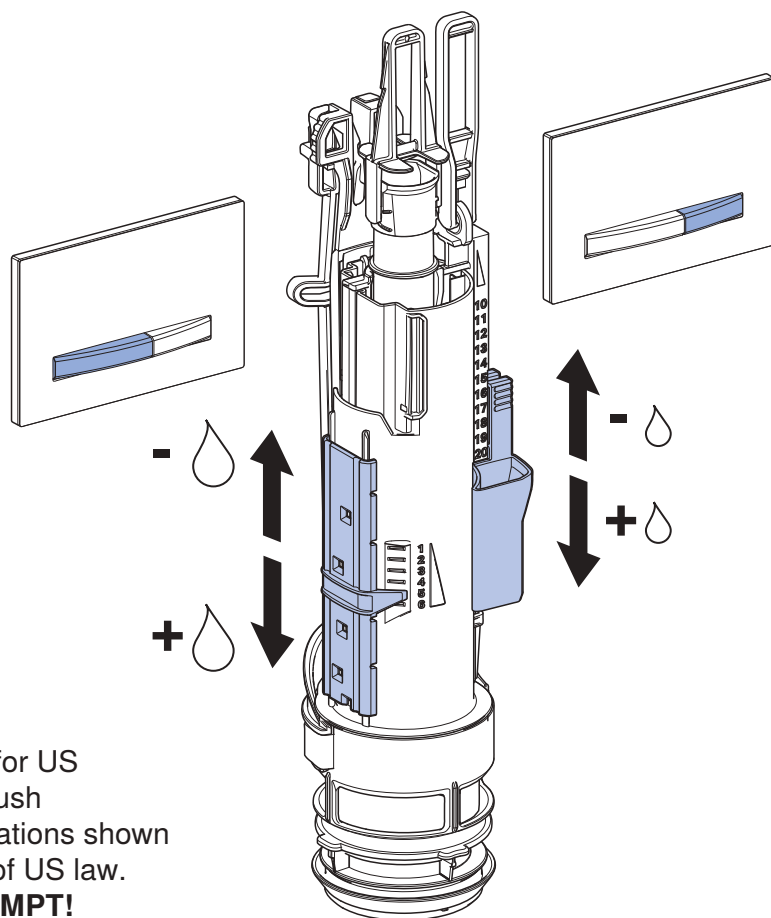

NOTE:

Not applicable for US installations. Flush volume modifications shown are a violation of US law.

DO NOT ATTEMPT!

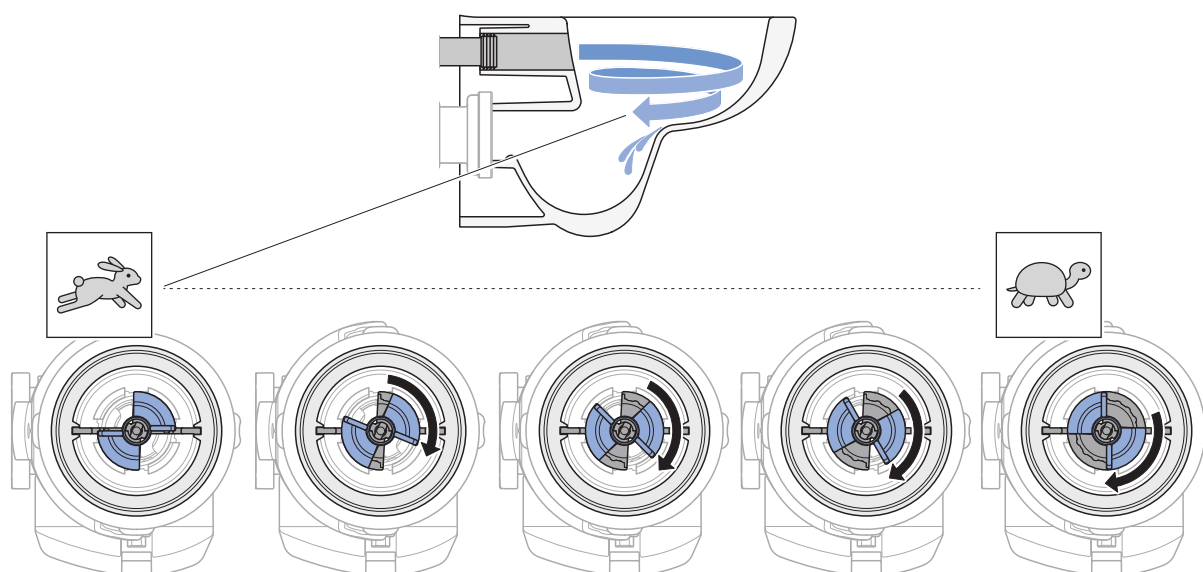



Geberit International AG
Schachenstrasse 77, CH-8645 Jona
documentation@geberit.com
www.geberit.com